SAN PATRICIO ELECTRIC COOPERATIVE, INC.

Distributed Generation Procedures & Guidelines Manual for Members

TABLE OF CONTENTS

GEN	ERAL	4
I. DE ⁻ 1) 2) 3) 4)	Contact persons Ownership of facilities	5 5 5
5)		
II. ME	EMBER'S INITIAL REQUIREMENTS	7
1)		
2)	Service request	7
3)	Application fees	7
III. CO	OOPERATIVE AND POWER SUPPLIER REVIEW PROCESS	8
	General	
,	Time to complete	
	Reporting	
,	Costs and benefits	
	Network service	
	CommunicationsLiability	
	Non-discrimination	
IV. S	ALES TO AND PURCHASES FROM A DG INSTALLATION	9
V. ME	EMBER'S RESPONSIBILITY PRIOR TO OPERATION	10
1)	Line extension and modifications to cooperative facilities	10
2)		
3)	•	
4) 5)	•	
5) 6)		
7)	Inspection and start-up	
, ,,, ,		
	PERATION OF PARALLEL FACILITY	
1) 2)	General Pre-certified equipment	
3)	• •	
4)	Manual disconnect	
5)		
6)	Access	16
7)	Liability for injuries and damages	
8)		
9)		
10)) Testing and record keeping	17

Distributed Generation Procedures and Guidelines Manual for Members

Pi	age 3
11) Disconnection and reconnection of service	18 18
OTHER INFORMATION	
COOPERATIVE AGREEMENT FOR INTERCONNECTION AND PARALLEL OPERATION OF DISTRIBUTED GENERATION	
APPLICATION FOR OPERATION OF CUSTOMER-OWNED DG	29
TARIFF: DISTRIBUTED GENERATION RIDER	33

GENERAL

In order to receive service from the Cooperative, a customer must join or become a "Member" of the Cooperative. Throughout this manual, customers will be referred to as "Members." For more information about the cooperative membership application process, including any applicable membership fees or deposits, see the Cooperative to request new member information.

It is the intent of the Cooperative to allow Members to install qualifying Distributed Generation (DG), provided the Member's DG facility does not adversely affect the Cooperative, is less than 700 kW in size, and is rated to produce an amount of electricity less than or equal to the amount of electricity the Member for whom the DG is installed is reasonably expected to consume. The Member must conduct his/her own analysis to determine the economic benefit of DG operation.

A DG facility that is not connected to the Cooperative's system in any way is known as "stand-alone" or "isolated" DG. The Member may operate a DG facility in stand-alone or isolated fashion as long as such DG facility does not adversely affect the Cooperative's system. A DG facility connected in any way to the Cooperative's system shall be considered as in "parallel." For purposes of this Manual, a DG facility is considered operating in "parallel" anytime it is connected to the Cooperative's system in any way, even if the Member does not intend to export power. All provisions of this Manual shall apply to parallel operation of DG facilities as so defined.

This Manual is not a complete description or listing of all laws, ordinances, rules and regulations, nor is this Manual intended to be an installation or safety manual. The Member requesting to interconnect a DG facility to the Cooperative's system is responsible for and must follow, in addition to all provisions of this Manual, the Cooperative's *Rules and Regulations* and *Tariffs for Electric Service*, the Cooperative's *Line Extension Policy*, the *Policies and Procedures* of the Cooperative's power supplier where applicable, the *Policies and Procedures* of the Cooperative's transmission service provider where applicable, the current *IEEE 1547 Standard Guide for Distributed Generation Interconnection* (a copy is on file at the Cooperative for inspection along with information so the Member may obtain his/her own copy), other applicable IEEE standards, applicable ANSI standards, including ANSI C84.1 Range A and any other applicable governmental and regulatory laws, rules, ordinances or requirements. All legal, technical, financial, etc. requirements in the following sections of this Manual must be met prior to interconnection of the DG facility to the Cooperative's system.

A Member may serve all load behind the meter at the location serving the DG facility but will not be allowed to serve multiple meters, multiple consuming facilities or multiple Members with a single DG facility or under a single DG application without prior approval by the cooperative.

DG facilities larger than 700 kW and facilities rated to produce an amount of electricity greater than the amount of electricity the Member for whom the DG is installed is reasonably expected to consume are not covered by this Manual and will be considered by the Cooperative on a non-discriminatory case-by-case basis.

I. DETERMINE THE CATEGORY OF DISTRIBUTED GENERATION FACILITY

1) Connection Level Category

- a) Connected to the Cooperative's system
 The Member requests and/or the Member's DG facility requires connection to the Cooperative's system. All provisions of this manual cover this category.
- b) Connected to the Cooperative's Power Supplier's system
 The Member requests and/or the Member's DG facility requires connection to the
 Cooperative's Power Supplier's system. This manual does NOT cover this
 category. The Member should contact the Cooperative's Power Supplier directly.

2) Contact Persons

a) The Cooperative's contact person for all matters related to DG interconnection shall be:

Name:

Address:

Phone:

Email:

b) The Cooperative's Power Supplier's contact person for all matters related to DG interconnection shall be:

Name:

Address:

Phone:

Email:

3) Ownership of facilities

The Member shall either own and be solely responsible for all expense, installation, maintenance and operation of all facilities, including all power generating facilities at and beyond the point of delivery as defined in the Cooperative's tariffs, or contract with another person to finance, install, or maintain facilities on the Member's side of the meter, regardless of whether the Member takes ownership of the installed distributed generation.

4) Power Export Category

- a) Parallel no power export

 The Member operates a DG facility connected <u>in any way</u> to the Cooperative system but with no intention to export power.
- b) Parallel primarily intended to be less than or equal to consumption. The Member operates a DG facility connected <u>in any way</u> to the Cooperative's system rated to produce an amount of electricity less than or equal to the amount

of electricity the Member for whom the DG is installed is reasonably expected to consume with the intention to export excess power.

c) Parallel – other

The Member operates a DG facility where either the power generated is intended for export only or where the DG facility is rated to produce an amount of electricity greater than the amount of electricity the Member for whom the DG is installed is reasonably expected to consume: This manual does not cover this category. The Cooperative will consider applications for service under this category on a case-by-case basis.

5) Qualifying or Non-Qualifying Category

- a) Qualifying Facilities (QF) are defined by the Public Utility Regulatory Policies Act of 1978 (PURPA). Refer to CFR Title 26, Volume 4, Sec. 292.204.
- b) The distinction between QF and Non-Qualifying Facilities (NQF) mainly deals with fuel use.
 - (1) A QF is defined as electric generation with a capacity of not more than 2 MW provided by renewable energy technology, as defined by PURPA, installed on a retail electric customer's (Member's) side of the meter. In general, this means that the DG must have as its primary energy source biomass, waste, renewable resources, geothermal resources or any combination. See PURPA for a full description
 - (2) Solar electric equipment installed on the Member's side of the meter at a building or other facility owned or operated by an independent school district, irrespective of the level of generation capacity shall be considered as a QF, but is not covered by the provisions of the manual if greater than 2 MW.
 - (3) DG facilities not designated as QF under the provisions of PURPA will be considered NQF by the Cooperative.
- c) The Cooperative will provide interconnection for a DG facility that is a QF, subject to the provisions of this Manual and all other applicable rules and regulations.
- d) The Cooperative will purchase power from a Member with a DG facility that is a QF, subject to the provisions of this policy and other applicable rules and regulations.
- e) The Cooperative may choose to provide interconnection and may choose to purchase power from a Member with a DG facility that is an NQF at the sole discretion of the Cooperative as determined on a non-discriminatory case-by-case basis.

II. MEMBER'S INITIAL REQUIREMENTS

1) Notification

- a) The Member must meet the requirements of all Cooperative tariffs, conditions of service, membership and other service rules and regulations in addition to the requirements in the Manual.
- b) The rated capacity of the Member's DG must not exceed the Cooperative's service capacity.
- c) Anyone owning or operating a DG facility in parallel with the Cooperative's system as defined in this manual must notify the Cooperative of the existence, location and category of the DG facility, whether the Member intends to export power to the Cooperative or not.

2) Service Request

- a) In order to interconnect a DG facility to the Cooperative system, a Member must first submit to the Cooperative the "Cooperative Application for Interconnection and Parallel Operation of Distributed Generation," using the form included in this manual.
- b) A separate form must be submitted for each facility.

3) Application Fees

The Cooperative and its Power Supplier, if requested by the Cooperative, may conduct a service study, coordination study and/or utility system impact study prior to interconnection of a DG facility. See the section on Pre-Interconnection Studies that follows.

- a) DG facilities for which no pre-interconnection study fee may be charged. The Cooperative will not charge a Member a fee to conduct a pre-interconnection study for pre-certified DG units up to 500 kW that export not more than 15% of the total load on a single radial feeder and contribute not more than 25% of the maximum potential short circuit current on a single radial feeder. All other DG facilities may be charged a fee to offset the costs incurred in a pre-interconnection study.
- b) DG facilities for which pre-interconnection study fees may be charged Prior to the interconnection of a DG facility for which a pre-interconnection study fee may be charged, the Cooperative may charge a Member a fee to offset its costs incurred in a pre-interconnection study.
 - i) In the case of DG facilities (1) to be operated in parallel with the Cooperative's system, (2) with no intention to export power to the Cooperative and (3) that are of standard design and intended entirely as emergency or back-up power supply for the facility, the Cooperative may waive the application fee.
 - ii) The Member shall receive an estimate of the study cost before the Cooperative initiates the study.

III. COOPERATIVE AND POWER SUPPLIER REVIEW PROCESS

1) Pre-Interconnection Studies for Interconnection of DG

a) <u>General</u>

The Cooperative and/or its Power Supplier, if requested by the Cooperative, may conduct a service study, coordination study and/or utility system impact study prior to interconnection of a DG facility. In instances where the studies are deemed necessary, the scope of such studies shall be based on the characteristics of the particular DG facility to be interconnected and the Cooperative's system at the specific proposed location. By agreement between the Cooperative and the Member, studies related to interconnection of a DG facility on the Member's premises may be conducted by a qualified third party.

b) Time to complete

The conduct of the pre-interconnection studies shall take no more than four weeks.

c) Reporting

The Cooperative shall prepare written reports of the study findings and make them available to the Member.

d) Costs and Benefits

The study shall consider both the costs incurred and the benefits realized as a result of the interconnection of the distributed generation to the Cooperative's system.

e) Network service

Network service is defined as two or more Cooperative primary distribution feeder sources electrically tied together on the secondary or low voltage side to form one power source for one or more customers. The service is designed to maintain service to the customers even after the loss of one of these primary distribution feeder sources. In the event that a DG facility requests interconnection to a secondary network system, additional requirements may apply.

f) Communications

The Cooperative and the Member agree to treat knowledge gained as a result of the application and/or interconnection studies about the other party as confidential.

g) Liability

The Member acknowledges and agrees that any review or acceptance of such plans, specifications and other information by the Cooperative and/or its Power Supplier shall not impose any liability on the Cooperative and/or its Power Supplier and does not guarantee the adequacy of the Member's equipment or DG facility to perform its intended function. The Cooperative and its Power Supplier disclaim any expertise or special knowledge relating to the design or

performance of generating installations and does not warrant the efficiency, cost-effectiveness, safety, durability, or reliability of such DG installations.

h) Non-discrimination

All applications for interconnection and parallel operation shall be processed by the Cooperative in a non-discriminatory manner. Applications will be processed in the order that they are received. It is recognized that certain applications may required minor modifications while they are being reviewed by the Cooperative. Such minor modifications to a pending application shall not require that it be considered incomplete and treated as a new or separate application.

IV. SALES TO AND PURCHASES FROM A DG FACILITY

For QF less than 700 kW and rated to produce an amount of electricity less than or equal to the amount of electricity the Member for whom the DG is installed is reasonably expected to consume and where the Member desires to export power:

- a) The Cooperative shall bill the Member for the energy supplied by the Cooperative during each billing period according to the Cooperative's applicable retail rate schedule.
- b) Energy supplied by the Member to the Cooperative's system exceeding on site consumption shall be purchased by the Cooperative at the Cooperative's avoided cost of generation. See DG Rider tariff 203.18.
- c) The Member shall sign an approved contract for interconnection service with the Cooperative.
- d) In addition to all other charges, the Cooperative may bill the Member for any additional facilities charges as determined by the Cooperative and appended to the Interconnection Agreement.
- e) The Cooperative may, at its sole discretion, as determined on a case-by-case non-discriminatory basis, purchase power from an NQF.
- f) The type of metering to be used shall provide data so the Cooperative can determine the energy supplied to the Member by the Cooperative in excess of on-site consumption and the energy supplied to the Cooperative by the Member.
- g) The Cooperative shall not be required to make any purchases that will cause the Cooperative to no longer be in compliance with any applicable contracts or allpower contract requirements with its power supplier(s) unless required by law or state regulation.
- h) Any renewable energy credits (RECs) resulting from the operation of the DG are the property of the DG Member unless sold or otherwise transferred by the Member.

V. MEMBER'S RESPONSIBILITY PRIOR TO OPERATION

1) Line Extension and Modifications to Cooperative Facilities

- a) If interconnection of a particular DG facility will require substantial capital upgrades to the Cooperative system, the Cooperative shall provide the Member with an estimate of the schedule and Member's cost for the upgrade. If the Member desires to proceed with the upgrade, the Member and the Cooperative will enter into a contract for the completion of the upgrade.
- b) If the Cooperative concludes that an application for interconnection describes facilities that may require additional devices and operating schemes beyond those described in this manual, the Cooperative shall make those additional requirements known to the Member at the time the interconnection studies are completed.
- c) As a part of the interconnection analysis performed by the Cooperative, the Member will be provided with an estimate of any line extension or other cost to be incurred in providing electric delivery service to the Member's DG facility.
- d) Notwithstanding the Cooperative's line extension policy, the Member shall pay the full cost of construction of any transmission, substation, distribution, transformation, metering, protective, or other facilities or equipment which is required to serve the Member's DG facility.
- e) In the event it is necessary at the time of initial interconnection or at some future time for the Cooperative and/or its Power Supplier to modify electric delivery systems because the Member's DG and/or the quality of power provided by the Member's DG adversely affects the Cooperative and/or its Power Supplier's delivery system, the Member will reimburse the Cooperative and/or its Power Supplier for all costs of modifications required for the interconnection of the Member's DG facilities.

2) Applicable Regulations

The DG facility shall be installed and operated subject to and in accordance with the terms and conditions set forth in the Cooperative's rules, regulations, bylaws, rates and tariffs, as amended from time to time, and, if applicable, approved by the Cooperative's board of directors, which are incorporated herein by reference, and in compliance with all applicable federal, state and local laws, regulations, zoning codes, building codes, safety rules, environmental restrictions, ordinances and regulations, including without limitation, the most recent IEEE Standard 1547 Guide for Distributed Generation Interconnection, applicable ANSI standards, including ANSI C84.1 Range A, Electric Reliability Council of Texas (ERCOT) Independent System Operator (ISO) directives and ERCOT guidelines, and in accordance with industry standard prudent engineering practices.

3) Liability Insurance

A Member meeting the standards of this manual shall not be required to purchase any amount, type or classification of liability insurance the Member would not have in the absence of the DG. The Cooperative recommends, however, the Member obtain liability insurance including contractual liability insurance covering indemnity agreements which insures the Member against all claims for property damage and for personal injury or death arising out of, resulting from or in any manner connected

with the installation, operation and maintenance of the Member's generating equipment.

4) Warranty

The Member must provide credible tangible proof that the DG to be interconnected has or had an original manufacturer's warranty against breakdown or undue degradation for at least five years.

5) Contracts

The Member will sign and deliver an Agreement for Interconnection to the Cooperative substantially in the form as shown in the COOPERATIVE AGREEMENT FOR INTERCONNECTION AND PARALLEL OPERATION OF DISTRIBUTED GENERATION included in this Manual.

6) Initial Interconnection

The Member shall provide the Cooperative with a completed application for interconnection and parallel operation with the Cooperative system using the form contained in the manual. The interconnection of the DG to the Cooperative system shall take place on the following schedule:

- a) For a facility qualifying under the provisions of pre-certified equipment, as certified under the provisions of the Public Utility Commission of Texas, interconnection shall take place within four weeks of the Cooperative's receipt of a completed interconnection agreement.
- b) For other facilities, interconnection shall take place within six weeks of the Cooperative's receipt of a completed application, except as described in this manual.
- c) If interconnection of a particular DG facility will require substantial capital upgrades to the Cooperative system, the Cooperative shall provide the Member with an estimated of the schedule and Member's cost for the upgrade. If the Member desires to proceed with the upgrade, the Member and the Cooperative will enter into a contract for the completion of the upgrade. The interconnection shall take place no later than two weeks following the completion of such upgrades. The Cooperative shall employ reasonable efforts to complete such system upgrades in the shortest time reasonable practical.
- d) The Cooperative shall use reasonable efforts to interconnect facilities within the time frames described in this manual. If in a particular instance the Cooperative determines that it cannot interconnect a DG facility within the time frames stated in this manual, it will notify the DG Member in writing of that fact. The notification will identify the reason or reasons interconnection could not be performed in accordance with the schedule and provide an estimated date for interconnection.
- e) The Cooperative's review process and any inspections are intended as a means to safeguard the Cooperative's facilities and personnel. The Member acknowledges and agrees that any review or acceptance of such plans, specifications and other information by the Cooperative and/or its Power Supplier shall not impose any liability on the Cooperative and/or its Power Supplier and does not guarantee the adequacy of the Member's equipment or DG facility to perform its intended function. The Cooperative and its Power Supplier disclaims any expertise or special knowledge relating to the design or performance of

generating installations and does not warrant the efficiency, cost-effectiveness, safety, durability, or reliability of such DG installations.

7) Inspection and start-up

The Member shall provide the Cooperative with notice at least two weeks before the initial energizing and start-up testing of the Member's DG equipment and the Cooperative may witness the testing of any equipment and protective systems associated with the interconnection. The Member shall revise and re-submit the application with information reflecting any proposed modification that may affect the safe and reliable operation of the Cooperative system.

VI. OPERATION OF PARALLEL FACILITY

The purpose of this section is to describe the requirements and procedures for safe and effective connection and operation of DG.

- a) The Member may operate a 60 Hertz (Hz) three-phase or single-phase DG facility, in parallel with the Cooperative system pursuant to an interconnection agreement, provided that the equipment meets or exceeds the requirements of this manual.
- b) This manual describes typical interconnection requirements. Certain specific interconnection locations and conditions may require the installation and use of more sophisticated protective devices and operating schemes, especially when the facility is exporting power to the Cooperative system.


2) Pre-certified equipment

Equipment pre-certified under the provisions of the Public Utility Commission of Texas may be installed on the Cooperative's system in accordance with an approved interconnection control and protection scheme without further review of their design by the Cooperative, though the protective settings and operations shall be those specified by the Cooperative.

3) General interconnection and protection requirements

- a) The DG shall be equipped with protective hardware and software designed to prevent the DG from being connected to a de-energized circuit owned by the Cooperative.
- b) The DG shall be equipped with the necessary protective hardware and software designed to prevent connection or parallel operation of the DG with the Cooperative system unless the Cooperative system voltage and frequency are of normal magnitude.
- c) The Member will be responsible for protecting his or her DG in such a manner that Cooperative system outages, short circuits, or other disturbances including zero sequence currents and Ferro resonant over-voltages do not damage the Member's DG. The Member's protective equipment shall also prevent unnecessary tripping of the Cooperative system breakers that would affect the Cooperative system's capability of providing reliable service to other members.

- d) Circuit breakers or other interrupting devices at the point of common coupling must be capable of interrupting maximum available fault current.
- e) The visible, lockable disconnect must separate all generation sources and equipment from the supply. Only one visible, lockable disconnect is allowed for safety purposes. No instrument wiring or other connections from the generation system may by-pass the visible, lockable disconnect to the supply side of the customers electrical system.
- f) Example Distributed Generation Interconnection:

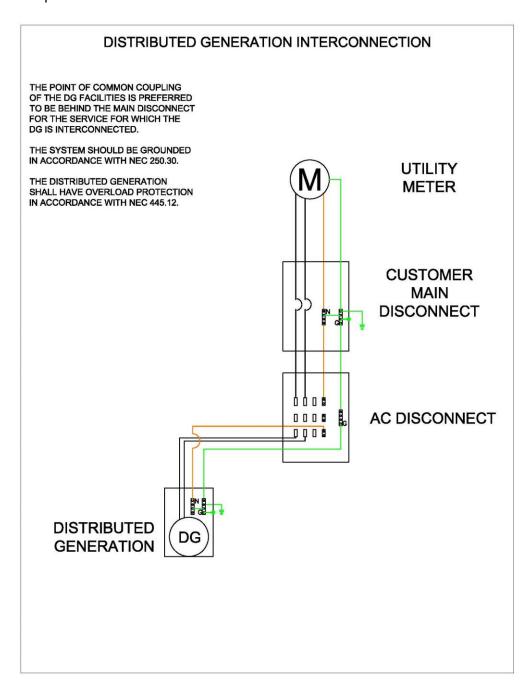

4) Manual disconnect

The Member will furnish and install a manual disconnect device that has a visual break that is appropriate to the voltage level (a disconnect switch, a draw-out breaker, or fuse block), and is accessible to the Cooperative personnel, and capable of being locked in the open position. The Member shall follow the Cooperative's switching, clearance, tagging, and locking procedures, which the Cooperative shall provide for the Member.

5) Prevention of interference

a) Voltage

The Member will operate its DG in such a manner that the voltage levels on the Cooperative system are in the same range as if the DG were not connected to the Cooperative system. The Member shall provide an automatic method of disconnecting the DG from the Cooperative system if a sustained voltage deviation in excess of +5% or -10% from normal voltage persists for more than 30 seconds, or a deviation in excess of +10% or -30% from normal voltage persists for more than 10 cycles. The Member may reconnect when the Cooperative system voltage and frequency return to normal range and the system is stabilized.

b) Flicker

The Member's equipment shall not cause excessive voltage flicker on the Cooperative's system. This flicker shall not exceed 3% voltage dip, in accordance with the IEEE Standard 519 as measured at the point of common coupling.

c) Frequency

The operating frequency of the Member's DG shall not deviate more than +0.5 Hz or -0.7 Hz from a 60 Hz base. The Member shall automatically disconnect the DG from the Cooperative system within 15 cycles if this frequency tolerance cannot be maintained. The Member may reconnect when the Cooperative system voltage and frequency return to normal range and the system is stabilized.

d) Harmonics

In accordance with IEEE Standard 519 the total harmonic distortion (THD) voltage shall not exceed 5% of the fundamental 60 Hz frequency nor 3% of the fundamental frequency for any individual harmonic when measuring at the point of common coupling with the utility system.

e) Fault and line clearing

The Member shall automatically disconnect from the Cooperative system within 10 cycles if the voltage on one or more phases falls below -30% of nominal voltage on the Cooperative system serving the Member premises. This disconnect timing also ensures that the DG is disconnected from the Cooperative system prior to automatic re-close of breakers. The member may reconnect when the Cooperative system voltage and frequency return to normal range and the system is stabilized. To enhance reliability and safety and with the

Cooperative's approval, the member may employ a modified relay scheme with delayed tripping or blocking using communications equipment between the Member and the Cooperative.

- f) Control, protection and safety protection requirements specific to single phase generators of 50 kW or less connected to the Cooperative's system

 Exporting to the Cooperative's system may require additional operational or protection devices and will require coordination of operations with the Cooperative. The necessary control, protection and safety equipment specific to single-phase DG of 50 kW or less connected to secondary or primary systems include an interconnect disconnect device, a generator disconnect device, an over-voltage trip, and under-voltage trip, an over/under frequency trip, and a synchronization check for synchronous and other types of DG with stand-alone capability.
- g) <u>Control, protection and safety equipment requirements specific to three-phase</u> synchronous generators, induction generators, and inverter systems
 - i) Three phase synchronous generators

The Member's DG circuit breakers shall be three-phase devices with electronic or electromechanical control. The Member is solely responsible for properly synchronizing its generator with the Cooperative. The excitation system response ratio shall not be less than 0.5. The generator's excitation system(s) shall conform, as near as reasonably achievable, to the field voltage versus time criteria specified in the ANSI Standard C50.13-1989 in order to permit adequate field forcing during transient conditions.

ii) Three phase induction generators and inverter systems
Induction generation may be connected and brought up to synchronous speed (as an induction motor) if it can be demonstrated that the initial voltage drop measured on the utility system at the point of common coupling is within the visible flicker stated in this manual. Otherwise, the Member may be required to install hardware or employ other techniques to bring voltage fluctuations to acceptable levels. Line-commutated inverters do not require synchronizing equipment. Self-commutated inverters whether of the utility-interactive type or stand-alone type shall be used in parallel with the utility system only with synchronizing equipment. Direct-current generation shall not operative in parallel with the utility system.

h) Protective function requirements

- i) Facilities rated 10 kW or less
 - Must have an interconnect disconnect device, a generator disconnect device, an over-voltage trip, an under-voltage trip, an over/under frequency trip, and a manual or automatic synchronizing check (for facilities with stand alone capability).
- ii) Facilities rated in excess of ten kW but not more than 500 kW

Must have an interconnect disconnect device, a generator disconnect device, an over-voltage trip, and under-voltage trip, and over/under frequency trip, a manual or automatic synchronizing check (for facilities with stand alone capability), either a ground over-voltage trip or a ground over-current trip depending on the ground system if required by the Cooperative, an reverse power sensing if the facility is not exporting (unless the generator is less than the minimum load of the Member).

iii) Facilities rated more than 500 kW

Must have an interconnect disconnect device, a generator disconnect device, an over-voltage trip, and under-voltage trip, and over/under frequency trip, either a ground over-voltage trip or a ground over-current trip depending on the ground system if required by the Cooperative, an automatic synchronizing check (for facilities with stand alone capability) and reverse power sensing if the facility is not exporting (unless the facility is less than the minimum load of the customer). If the facility is exporting power, the power direction protective function may be used to block or delay the under frequency trip with the agreement of the Cooperative.

i) Facilities not identified

In the event the standards for a specific unit or facility are not set out in this manual, the Cooperative and the Member may interconnect a facility using mutually agreed upon technical standards.

j) Requirements specific to a facility paralleling for 60 cycles or less (closed transition switching)

The protective devices required for facilities 10 MW or less which parallel with the Cooperative system for 60 cycles or less are an interconnect disconnect device, a generator disconnect device, an automatic synchronizing check for generators with stand alone capability, an over-voltage trip, an under voltage trip, an over/under frequency trip, and either a ground over-voltage trip or a ground over-current trip depending on the grounding system, if required by the Cooperative.

k) Inspection and start-up

The Member shall provide the Cooperative with notice at least two weeks before the initial energizing and start-up testing of the Member's DG equipment and the Cooperative may witness the testing of any equipment and protective systems associated with the interconnection. The Member shall revise and re-submit the application with information reflecting any proposed modification that may affect the safe and reliable operation of the Cooperative system.

I) Site testing and commissioning

Testing of protection systems shall include procedures to functionally test the protective elements of the system up to and including tripping of the generator and interconnection point. Testing will verify all protective set points and relay/breaker trip timing. The Cooperative may witness the testing of installed switchgear, protection and generator. The Member is responsible for routine maintenance of the generator and control and protective equipment. The Member will maintain records of such maintenance activities, which the

Cooperative may review at reasonable times. For DG systems greater than 500 kW, a log of generator operations shall be kept. At a minimum, the log shall include the date, generator time on, generator time off, and megawatt and megavar output. The Cooperative may review such logs at reasonable times.

6) Access

- a) Persons authorized by the Cooperative will have the right to enter the Member's property for purposes of testing, operating the disconnect switch, reading or testing the metering equipment, maintaining right-of-way or other DG facility equipment and/or Cooperative service requirement. Such entry onto the Member's property may be without notice.
- b) If the Member erects or maintains locked gates or other barriers, the Member will furnish the Cooperative with convenient means to circumvent the barrier for full access for the above-mentioned reasons.

7) Liability for Injury and Damages

- (a) The Member assumes full responsibility for electric energy furnished at and past the point of delivery and shall indemnify the Cooperative and/or its Power Supplier against and hold the Cooperative and/or its Power Supplier harmless from all claims for both injuries to persons, including death resulting therefrom, and damages to property occurring upon the premises owned or operated by Member arising from electric power and energy delivered by the Cooperative or in any way arising directly or indirectly from the Member's DG facility.
- (b) The Cooperative and/or its Power Supplier shall not be liable for either direct or consequential damages resulting from failures, interruptions, or voltage and waveform fluctuations occasioned by causes reasonably beyond the control of the Cooperative and/or its Power Supplier including, but not limited to, acts of God or public enemy, sabotage and/or vandalism, accidents, fire, explosion, labor troubles, strikes, order of any court or judge granted in any bona fide adverse legal proceeding or action, or any order of any commission, tribunal or authority having jurisdiction. ALL governmental **PROVISIONS** NOTWITHSTANDING, IN NO EVENT SHALL THE COOPERATIVE BE LIABLE TO THE MEMBER FOR ANY INTEREST, LOSS OF ANTICIPATED REVENUE, EARNINGS, PROFITS, OR INCREASED ESPENSE OF OPERATIONS, LOSS BY REASON OF SHUTDOWN OR NON-OPERATION OF MEMBER'S PREMISES OR FACILITIES FOR ANY INDIRECT, INCIDENTAL, OR CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES ARISING OUT OF OR RELATED, IN WHOLE OR PART, TO THIS AGREEMENT. The Cooperative shall not be liable in any event for consequential damages.
- b) The Member is solely responsible for insuring his/her facility complies with all applicable regulations including, but not limited to, laws, regulations, ordinances, Cooperative and Cooperative Power Supplier tariffs, policies and directives, and ERCOT rules, policies and directives.

8) Metering/Monitoring

- a) The Cooperative may supply, own and maintain all necessary meters and associated equipment to record energy purchases by the Member and energy exports to the Cooperative system.
- b) The Member shall supply at no cost to the Cooperative a suitable location on his or her premises for the installation of the Cooperative's meters and other equipment.
- c) The facility will be metered by one of the following methods, at the discretion of the Cooperative. The two metered values shall be separately accounted for by the Cooperative.
 - (1) Installing a single meter with two registers capable of measuring in-flow and out-flow at the point of common coupling or
 - (2) Installing separate meters, that measure the in-flow and the out-flow at the point of common coupling.
- d) The meter shall be read at a time or times of month determined by the Cooperative's for acquiring metering data.
- e) The Cooperative may, at its sole discretion, require the Member to pay the Cooperative any significant differential cost of the metering and monitoring equipment and installation expense beyond that that a standard Member in the same rate class would require.
- f) Meter testing shall follow the Cooperative's standard policy on metering testing and accuracy.
- g) At its sole discretion, the Cooperative may meter the facility at primary or secondary level.

9) Notice of Change in Installation

- a) The Member will notify the Cooperative in writing thirty (30) days in advance of making any change affecting the characteristics, performance, or protection of the DG facility.
- b) If any modification undertaken by the Member will create or has created conditions which may be unsafe or adversely affect the Cooperative system, the Member shall immediately correct such conditions or be subject to immediate disconnection from the Cooperative system.

10) Testing and Record Keeping

a) The Cooperative shall maintain records concerning applications received for interconnection and parallel operation of DG facilities. Such records will include the date each application is received, documents generated in the course of processing each application, correspondence regarding each application, and the final disposition of each application.

- b) The Member will test all aspects of the protection systems up to and including tripping of the generator and interconnection point at start-up and thereafter as required. Testing will verify all protective set points and relay/breaker trip timing and shall include procedures to functionally test all protective elements of the system. The Cooperative may witness the testing.
- c) The Member will maintain records of all maintenance activities, which the Cooperative may review at reasonable times.

11) Disconnection and Reconnection of Service

- a) The Cooperative may disconnect a DG facility under the following conditions:
 - i) Expiration or termination of the interconnection agreement
 Upon expiration or termination of the interconnection agreement with a
 Member, in accordance with the terms of the agreement, the Cooperative
 may disconnect the DG facilities.

ii) Non-compliance with technical requirements

The Cooperative may disconnect a DG facility if the facility is not in compliance with the technical requirements specified in this manual. Within two business days from the time the Member notifies the Cooperative that the DG facility has been restored to compliance with the technical requirements of this manual, the Cooperative shall verify such compliance. Upon such verification, the Member in coordination with the Cooperative may reconnect the DG facility.

iii) System emergency

The Cooperative may temporarily disconnect a Member and/or a DG facility without prior written notice in cases where continued interconnection will endanger persons or property. During the forced outage of the Cooperative system, the Cooperative shall have the right to temporarily disconnect a Member and/or a DG facility to make immediate repairs on the Cooperative system. When possible, the Cooperative shall provide the Member with reasonable notice and reconnect the Member as quickly as reasonable practical.

iv) Routine maintenance, repairs and modifications

The Cooperative may disconnect a Member and/or a DG facility with seven business days prior written notice of service interruption for routine maintenance, repairs and Cooperative system modifications. The Cooperative shall reconnect the Member as quickly as reasonably possible following such service interruption.

v) Lack of approved application and interconnection agreement

The Cooperative may refuse to connect or may disconnect a DG facility if the application has not been received and approved.

12) Compliance with Laws, Rules and Tariffs

The DG installation owned and installed by the Member shall be installed and operated subject to and in accordance with the terms and conditions set forth in the Cooperative's rules, regulations, bylaws, rates and tariffs, as amended from time to time, and, if applicable, approved by the Cooperative's board of directors, which are incorporated herein by reference, and in compliance with all <u>applicable</u> federal, state and local laws, regulations, zoning codes, building codes, safety rules, environmental restrictions, ordinances and regulations, including without limitation, Public Utility Commission of Texas (PUCT), Electric Reliability Council of Texas (ERCOT) Independent System Operator (ISO) directives and ERCOT guidelines, and in accordance with industry standard prudent engineering practices.

Board Approved: 11/23/2009

SAN PATRICIO ELECTRIC COOPERATIVE, INC. AGREEMENT FOR INTERCONNECTION AND PARALLEL OPERATION OF DISTRIBUTED GENERATION

This Interconnection Agreement ("Agreement") is made and entered into this day
of, 20, by SAN PATRICIO ELECTRIC COOPERATIVE, ("Cooperative"), a
corporation organized under the laws of Texas, and ("DG
Owner/Operator"), each hereinafter sometimes referred to individually as "Party" or both
referred to collectively as the "Parties." In consideration of the mutual covenants set forth herein
the Parties agree as follows:
1. Scope of Agreement This Agreement is applicable to conditions under which the
Cooperative and the DG Owner/Operator agree that one or more generating facilities (described in
Exhibit A) owned by the DG Owner/Operator of kW or less, to be interconnected at
kV or less ("Facilities") may be interconnected to the Cooperative's electric power
distribution system ("System").
The provisions of the Cooperative's Distributed Generation Manual shall be considered to be a part
of this contract.

2. **Establishment of Point of Interconnection -** The point where the electric energy first leaves the wires or facilities owned by the Cooperative and enters the wires or facilities provided by DG Owner/Operator is the "Point of Interconnection." Cooperative and DG Owner/Operator agree to interconnect the Facilities at the Point of Interconnection in accordance with the Cooperative's Rules and Regulations and DG Manual relating to interconnection of Distributed Generation (the "Rules") and as described in the attached Exhibit A. The interconnection

equipment installed by the DG Owner/Operator ("Interconnection Facilities") shall be in accordance

with the Rules as well.

3. Responsibilities of Cooperative and DG Owner/Operator for Installation, Operation and Maintenance of Facilities - DG Owner/Operator will, at its own cost and expense, operate, maintain, repair, and inspect, and shall be fully responsible for, its Facilities, unless otherwise specified on Exhibit A. DG Owner/Operator shall conduct operations of its Facilities in compliance with all aspects of the Rules, and Cooperative shall conduct operations of its electric distribution facilities in compliance with all aspects of the Rules, or as further described and mutually agreed to in the applicable Facilities Schedule. Maintenance of Interconnection Facilities shall be performed in accordance with the applicable manufacturers' recommended maintenance schedule. The DG Owner/Operator agrees to cause its Interconnection Facilities to be constructed in accordance with specifications equal to or better than those provided by the National Electrical Safety Code and the National Electrical Code, both codes approved by the American National Standards Institute, in effect at the time of construction.

The DG Owner/Operator covenants and agrees to cause the design, installation, maintenance, and operation of, its Facilities and Interconnection Facilities so as to reasonably minimize the likelihood of a malfunction or other disturbance, damaging or otherwise affecting or impairing the System. DG Owner/Operator shall comply with all applicable laws, regulations, zoning codes, building codes, safety rules and environmental restrictions applicable to the design, installation and operation of its Facilities and Interconnection Facilities.

Cooperative will notify DG Owner/Operator if there is evidence that the Facilities' operation causes disruption or deterioration of service to other customer(s) served from the System or if the Facilities' operation causes damage to the System. DG Owner/Operator will notify the Cooperative of any emergency or hazardous condition or occurrence with the DG Owner/Operator's Facilities, which could affect safe operation of the System.

4. **Operator in Charge -** The Cooperative and the DG Owner/Operator shall each identify an individual (by name or title) who will perform as "Operator in Charge" of the facilities and their section of the Interconnection Facilities. This individual must be familiar with this Agreement as well as provisions of other agreements and any regulations that may apply.

5. Limitation of Liability and Indemnification

- a. Notwithstanding any other provision in this Agreement, with respect to the Cooperative's provision of electric service to DG Owner/Operator and the services provided by the Cooperative pursuant to this Agreement, Cooperative's liability to DG Owner/Operator shall be limited as set forth in the Cooperative's tariffs and terms and conditions for electric service, which are incorporated herein by reference.
- b. Neither Cooperative nor DG Owner/Operator shall be liable to the other for damages for any act or omission that is beyond such party's control, including, but not limited to, any event that is a result of an act of God, labor disturbance, act of the public enemy, war, insurrection, riot, fire, storm, flood, explosion, breakage or accident to any part of the System or to any other machinery or equipment, a curtailment, law, order, or regulation or restriction by governmental, military, or lawfully established civilian authorities.
- c. Notwithstanding Paragraph 5.b of this Agreement, the DG Owner/Operator shall assume all liability for, and shall indemnify Cooperative for, any claims, losses, costs, and expenses of any kind or character to the extent that they result from DG Owner/Operator's negligence or other wrongful conduct in connection with the design, construction or operation of the Facilities or Interconnection Facilities. Such indemnity shall include, but is not limited to, financial responsibility for (a) monetary losses; (b) reasonable costs and expenses of defending an action or claim; (c) damages related to death or injury; (d) damages to property; and (e) damages for the disruption of business. This paragraph does not create a liability on the part of the DG Owner/Operator to the Cooperative or a third person, but requires indemnification where such liability exists.
- d. Cooperative and DG Owner/Operator shall each be responsible for the safe installation, maintenance, repair and condition of their respective lines, wires, switches, or other equipment or property on their respective sides of the Point of Interconnection. The Cooperative, while retaining the right to inspect, does not assume any duty of inspecting the DG Owner/Operator's lines, wires, switches, or other equipment or property and will not be responsible therefore. DG Owner/Operator assumes all responsibility for the electric service supplied hereunder and the facilities used in connection therewith at or beyond the Point of Interconnection.
- e. For the mutual protection of the DG Owner/Operator and the Cooperative, only with Cooperative prior written authorization are the connections between the Cooperative's

service wires and the DG Owner/Operator's service entrance conductors to be energized.

- 6. **Design Reviews and Inspections -** The DG Owner/Operator shall provide to the Cooperative the following documentation and inspection results:
 - a. <u>One-Line Diagram</u>. The diagram shall include at a minimum, all major electrical equipment that is pertinent to understanding the normal and contingency operations of the DG Interconnection Facilities, including generators, switches, circuit breakers, fuses, protective relays and instrument transformers.
 - b. <u>Testing Records.</u> Testing of protection systems shall be limited to records of compliance with standard acceptance procedures and by industry standards and practices. These records shall include testing at the start of commercial operation and periodic testing thereafter.
- 7. **Right of Access, Equipment Installation, Removal** & **Inspection -** The Cooperative may send an employee, agent or contractor to the premises of the DG Owner/Operator at any time whether before, during or after the time the Facility first produces energy to inspect the Interconnection Facilities, and observe the Facility's installation, commissioning (including any testing), startup, and operation.

At all times Cooperative shall have access to DG Owner/Operator's premises for any reasonable purpose in connection with the interconnection described in this Agreement, the Rules, or to provide service to its customers.

- 8. **Confidentiality of Information -** Unless compelled to disclose by judicial or administrative process, or by other provisions of law or as otherwise provided for in this Agreement, the DG Owner/Operator and the Cooperative will hold in confidence any and all documents and information furnished by the other party in connection with this Agreement.
- 9. **Prudent Operation and Maintenance Requirements -** The DG Owner/Operator shall operate and maintain its Facilities and Interconnection Facilities in accordance with industry standards prudent electrical practices in effect at the time a DG Owner/Operator executes an interconnection agreement with the Cooperative.
- 10. **Disconnection of Unit -** DG Owner/Operator retains the option to disconnect its Facilities from the System, provided that DG Owner/Operator notifies the Cooperative of its intent to disconnect by giving the Cooperative at least thirty (30) days' prior written notice. Such disconnection shall not be a termination of the Agreement unless DG Owner/Operator exercises rights under Section 13.

DG Owner/Operator shall disconnect Facilities from the System upon the effective date of any termination under Section 13.

Subject to the Rules, for routine maintenance and repairs on the System, Cooperative shall provide DG Owner/Operator with seven (7) business days' notice of service interruption.

Cooperative shall have the right to suspend service in cases where continuance of service to DG Owner/Operator will endanger persons or property. During the forced outage of the System serving DG Owner/Operator, Cooperative shall have the right to suspend service to effect repairs

on the System, but the Cooperative shall use its efforts to provide the DG Owner/Operator with reasonable prior notice.

- 11. **Metering -** Metering shall be accomplished as described in the Cooperative's DG Manual.
- 12. **Insurance –** Insurance shall be required as described in the Cooperative's DG Manual.
- 13. Effective Term and Termination Rights This Agreement becomes effective when executed by both Parties and shall continue in effect until terminated. This agreement may be terminated as follows: (a) DG Owner/Operator may terminate this Agreement at any time by giving the Cooperative sixty days' written notice; (b) Cooperative may terminate upon failure by the DG Owner/Operator to generate energy from the Facilities in parallel within six (6) months after completion of the interconnection; (c) either Party may terminate by giving the other Party at least thirty (30) days prior written notice that the other Party is in default of any of the terms and conditions of the Agreement or the Rules or any rate schedule, tariff, regulation, contract, or policy of the Cooperative, so long as the notice specifies the basis for termination and there is opportunity to cure the default; (d) Cooperative may terminate by giving DG Owner/Operator at least sixty (60) days notice in the event that there is a material change in an applicable law, or any requirement of the Cooperative's wholesale electric suppliers or any transmission utility, independent system operator or regional transmission organization having responsibility for the operation of any part of the System.
- 14. **Dispute Resolution -** Each party agrees to attempt to resolve any and all disputes arising hereunder promptly, equitably and in good faith. If a dispute arises under this Agreement that cannot be resolved by the parties within forty-five (45) working days after written notice of the dispute, the parties agree to submit the dispute to mediation by a mutually acceptable mediator. The parties agree to participate in good faith in the mediation for thirty (30) days. If the parties are unsuccessful in resolving their dispute through mediation, then the parties shall submit to arbitration pursuant to the Commercial Arbitration Rules of the American Arbitration Association. The venue of such arbitration shall be ______.
- 15. Compliance with Laws, Rules and Tariffs Both the Cooperative and the DG Owner/Operator shall be responsible for complying with all applicable laws, rules and regulations, including but not limited to the laws of the state of Texas, and the Cooperative's DG Manual, Tariffs, Rules and Regulations, By-Laws and other governing documents. The interconnection and services provided under this Agreement shall at all times be subject to the terms and conditions set forth in the tariff schedules and rules of the Cooperative as applicable to the electric service provided by the Cooperative, which tariffs and rules are hereby incorporated into this Agreement by this reference. The Cooperative shall have the right to publish changes in rates, classification, service or rule, with the proper notification to all DG owners/operators and Cooperative members.
- 16. **Severability** -If any portion or provision of this Agreement is held or adjudged for any reason to be invalid or illegal or unenforceable by any court of competent jurisdiction, such portion shall be deemed separate and independent, and the remainder of this Agreement shall remain in full force and effect.
- 17. **Amendment -** This Agreement may be amended only upon mutual agreement of the Parties, which amendment will not be effective until reduced to writing and executed by the Parties.

- 18. Entirety of Agreement and Prior Agreements Superseded This Agreement, including the Rules and all attached Exhibits and Facilities Schedules, which are expressly made a part hereof for all purposes, constitutes the entire agreement and understanding between the Parties with regard to the interconnection of the facilities of the Parties at the Points of Interconnection expressly provided for in this Agreement. The Parties are not bound by or liable for any statement, representation, promise, inducement, understanding, or undertaking of any kind or nature (whether written or oral) with regard to the subject matter hereof not set forth or provided for herein or in the DG Owner/Operator application, or other written information provided by the DG Owner/Operator in compliance with the Rules. It is expressly acknowledged that the Parties may have other agreements covering other services not expressly provided for herein, which agreements are unaffected by this Agreement.
- 19. Force Majeure -For the purposes of this Agreement, a Force Majeure event is any event: (a) that is beyond the reasonable control of the affected party; and (b) that the affected party is unable to prevent or provide against by exercising reasonable diligence, including the following events or circumstances, but only to the extent that they satisfy the preceding requirements: acts of war, public disorder, rebellion or insurrection; floods, hurricanes, earthquakes, lighting, storms or other natural calamities; explosions or fires; strikes, work stoppages or labor disputes; embargoes; and sabotage. If a Force Majeure event prevents a party from fulfilling any obligations under this agreement, such party will promptly notify the other party in writing and will keep the other party informed on a continuing basis as to the scope and duration of the Force Majeure event. The affected party will specify the circumstances of the Force Majeure event, its expected duration and the steps that the affected party is taking to mitigate the effect of the event on its performance. The affected party will be entitled to suspend or modify its performance of obligations under this Agreement but will use reasonable efforts to resume its performance as soon as possible.
- 20. **Assignment -** At any time during the term of this Agreement, the DG Owner/Operator may assign this Agreement to a corporation, an entity with limited liability or an individual (the "Assignee"), provided that the DG Owner/Operator obtains the consent of the Cooperative in advance of the assignment. The Cooperative's consent will be based on a determination that the Assignee is financially and technically capable to assume ownership and/or operation of the DG unit. The company or individual to which this Agreement is assigned will be responsible for the proper operation and maintenance of the unit, and will be a party to all provisions of this Agreement.
- 21. **Permits, Fees and Approvals -** The Cooperative will have responsibility for the review, approval or rejection of the DG interconnection application. The approval process is intended to ensure that the implementation of the applicant's DG unit will not adversely affect the safe and reliable operation of the Cooperative's System. The fees associated with the Application are listed in the most current fee schedule issued by the Cooperative. All fees are to be submitted in the form of a Bank Cashier's check along with the Application, unless other payment terms have been approved in advance by the Cooperative.
- 22. **Notices -** Notices given under this Agreement are deemed to have been duly delivered if hand delivered or sent by United States certified mail, return receipt requested, postage prepaid, to:

Distributed Generation Procedures and Guidelines Manual for Members

The above-listed names, titles, and addresses of either Party may be changed by written notification to the other, notwithstanding Section 17.

- 23. **Invoicing and Payment -** Invoicing and payment terms for services associated with this Agreement shall be consistent with applicable Rules of the Cooperative.
- 24. Limitations (No Third-Party Beneficiaries, Waiver, etc.) This Agreement is not intended to, and does not create, rights, remedies, or benefits of any character whatsoever in favor of any persons, corporations, associations, or entities other than the Parties, and the obligations herein assumed are solely for the use and benefit of the Parties. This Agreement may not be assigned by the DG Owner/Operator without the prior written consent of the Cooperative as specified in Section 20. The failure of a Party to this Agreement to insist, on any occasion, upon strict performance of any provision of this Agreement will not be considered to waive the obligations, rights, or duties imposed upon the Parties.
- 25. **Headings -** The descriptive headings of the various articles and sections of this Agreement have been inserted for convenience of reference only and are to be afforded no significance in the interpretation or construction of this Agreement.
- 26. **Multiple Counterparts -** This Agreement may be executed in two or more counterparts, each of which is deemed an original but all constitute one and the same instrument.

Page 2	27
--------	----

IN WITNESS WHEREOF, the Parties have caused this Agreement to be signed by their respective duly authorized representatives.

[COOPERATIVE NAME]	[DG OWNER/OPERATOR NAME]
BY:	BY:
TITLE:	TITLE:
DATE:	DATE:

EXHIBIT A DESCRIPTION OF FACILITIES AND POINT OF INTERCONNECTION

DG Owner/Operator will, at its own cost and expense, operate, maintain, repair, and inspect, and shall be fully responsible for its Facilities, unless otherwise specified on Exhibit A.

FACILITIES SCHEDULE NO.

DATE:_____

FACILITIES SCHEDULE NO.	
The following information is to be specified for each	Point of Interconnection, if applicable]
1. <u>Name:</u>	
2. Facilities location:	
3. <u>Delivery voltage:</u>	
4. Metering (voltage, location, losses adjustment du	e to metering location, and other:
5. Normal Operation of Interconnection:	
6. One line diagram attached (check one):/	Yes /
7. Facilities to be furnished by Cooperative:	
8. Facilities to be furnished by DG Owner/Operato	<u>Or:</u>
9. Cost Responsibility:	
10. Control area interchange point (check one): /	Yes / No
11. Supplemental terms and conditions attached (ch	eck one): / Yes / No
12. Cooperative rules for DG interconnection attache	ed (check one): / Yes /
[COOPERATIVE NAME]	[DG OWNER/OPERATOR NAME]
BY:	BY:
TITLE:	TITLE:

DATE: _____

SAN PATRICIO ELECTRIC COOPERATIVE, INC.

Application for Operation of Customer-Owned Generation

This application should be completed as soon as possible and returned to the Cooperative Customer Service representative in order to begin processing the request. See *Distributed Generation Procedures and Guidelines Manual for Members* for additional information.

INFORMATION: This application is used by the Cooperative to determine the required equipment configuration for the Customer interface. Every effort should be made to supply as much information as possible.

PART 1					
OWNER/APPLICAN	T INFORMATION	N			
Company:					
Mailing Address:					
				Zip Code:	
Phone Number:		Representat	ive:		
PROJECT DESIGI	N/ENGINEERIN	NG (as applicable	∍)		
Company:					
Mailing Address:					
				Zip Code:	
Phone Number:		Representat	ive:		
ELECTRICAL CON					
Mailing Address:					
				Zip Code:	
				·	
TYPE OF GENERA	ATOR (as appli	icable)			
Photovoltaic	Wi	ind	_ Microti	urbine	
Diesel Engine	G	as Engine	_ Turbine	e Other	
ESTIMATED LOA	D INFORMATION	ON			
The following information interconnection. This purposes.	ation will be used information is no	to help properly de t intended as a co	esign the mmitmer	Cooperative customer nt or contract for billing	
Total Site Load	(kW)	Total DG Output_		(kW)	

Page 31 Mode of Operation (check all that apply) Isolated_____ Paralleling____ Power Export ____ DESCRIPTION OF PROPOSED INSTALLATION AND OPERATION Give a general description of the proposed installation, including when you plan to operate the generator. PART 2 (Complete all applicable items. Copy this page as required for additional generators.) SYNCHRONOUS GENERATOR DATA Unit Number: _____ Total number of units with listed specifications on site: _____ Manufacturer: _____ Date of manufacture: _____ Serial Number (each): _____ Phases: Single ____ Three ___ R.P.M.: _____ Frequency (Hz): _____ Rated Output (for one unit): _____ Kilowatt ____ Kilovolt-Amper____ Rated Power Factor (%): _____ Rated Voltage (Volts) _____ Rated Amperes: _____ Field Volts: _____ Field Amps: _____ Motoring power (kW): Synchronous Reactance (X'd): ______ % on _____ KVA base Transient Reactance (X'd): ______ % on _____ KVA base Zero Sequence Reactance (Xo): _______ % on _____ KVA base Neutral Grounding Resistor (if applicable): ____ l₂²t of K (heating time constant): _____ Additional Information: INDUCTION GENERATOR DATA Rotor Resistance (Rr): _____ ohms Stator Resistance (Rs): ____ ohms Rotor Reactance (Xr): ____ ohms Stator Reactance (Xs): ____ ohms

						Page 32
Magnetizing Rea Design letter:			Fram	e Size:		
Exciting Current:			Temp	o Rise (deg C ^o	°):	
Reactive Power F Additional Inform					·	(full load)
——————————————————————————————————————	ation					
PRIME MOVER (Unit Number:						
Manufacturer:	· yı	pc				
Manufacturer: Serial Number: _ H.P. Rates:			Date of mar	nufacturer:		
Energy Source (h	nydro, steam	n, wind, e	etc.)			
CENEDATOR TO		AED (Co.	malata all an	pliachla itama	`	
GENERATOR TF TRANSFORMER)	
Generator unit nu	ımber:	D	ate of manu	facturer:		
Manufacturer:						
Serial Number: _						
High Voltage:						
Low Voltage:						
Transformer Imperation Transformer Res	edance (Z):		% on % or			KVA base
Transformer Rea	isialice (N). actance (X):		% OI % Or	י		_ KVA base _ K\/A hase
Neutral Groundin						
INVERTER DATA	A (if applica	ble)				
Manufacturer:			I	Model:		
Manufacturer: Rate Power Factor						
Inverter Type (fer				odulation, etc.)):	
Type commutation			line In Hamanania	(0/)		
Harmonic Distorti				(%) %)		
Note: Attach all	available o	alculatio	ns test rep	orts, and osci	llographic pr	ints showing
inverter output vo				one, and coo.	eg.ape p.	
POWER CIRCUIT				Madalı		
Manufacturer: Rated Voltage (k	ilovolte):		ا ا	viouei:	ty (Amporos)	
Interrunting rating	g (Amneres)) <u>:</u>	ا Rا	Tatou ampaon IL Rating	.y (AIIIPGIGS)	
Interrupting rating Interrupting medi	um / insulati	ing medi	um (ex. Vacı	uum, gas. oil)	/	
Control Voltage (Closina).	(Volts)	AC.	DC		
Control Voltage (Tripping): $_$	(Volts) AC	DC Batt	ery Charged	
Control Voltage (Close energy:	Spring	Motor	Hydraulic	Pneumatic	Other:	
Trip energy:	Spring	Motor	Hydraulic	Pneumatic	Other:	

Distributed Generation Procedures and Guidelines Manual for Members

	Page 33
Bushing Current Transfo Multi Ratio? No	rmers: (Max. ratio) Relay Accuracy Class: Yes: (available taps)
ADDITIONAL INFORMA	ATION
proposed facility, all aptransformers, inverters,	listed above, please attach a detailed one-line diagram of the oplicable elementary diagrams, major equipment (generators, circuit breakers, protective relays, etc.), specifications, test her applicable drawings or documents necessary for the proper ction.
SIGN OFF AREA	
	provide the Cooperative with any additional information required nection. The customer shall operate his equipment within the e Cooperative.
Applicant	Date
ELECTRIC COOPERAT MORE INFORMATION:	TIVE CONTACT FOR APPLICATION SUBMISSION AND FOR
Cooperative contact: Title: Address:	
Phone: Fax:	

SAN PATRICIO ELECTRIC COOPERATIVE, INC.

SECTION: RATES AND CHARGES Page 1 of 4

203.22 Distributed Generation and Net Metering Rate Rider

A. Application

Applicable to Qualifying Distributed Generation Facilities smaller than 700 kW of connected generation, rated to produce an amount of electricity less than or equal to the amount of electricity the Customer for whom the DG is installed is reasonably expected to consume and connected in parallel operation to the Cooperative's electric system in accordance with the Cooperative's service rules and regulations and the Cooperative's *Distributed Generation Procedures and Guidelines Manual for* Members (available on request). This rate is not applicable to temporary, shared, or resale service.

The Customer may connect multiple Distributed Generation Facilities behind a single Cooperative meter to the Customer, but the total of the connected maximum rated output shall not exceed the tariff limit. This rate is applicable to service supplied at one point of delivery.

If any part of these sections shall be in conflict with any other provision of this tariff, these sections shall control. By agreement, the Cooperative and Customer may establish additional or different terms, conditions, or rates for the sale or purchase of electricity.

B. <u>Sales to Customer</u>

Sales to a Distributed Generation Customer shall be consistent with the applicable retail rate tariff established by the Cooperative and in use by the Customer as if there were no Distributed Generation installation. In addition to all other charges, the Cooperative may bill the Member for any additional facilities charges as determined by the Cooperative and appended to the Interconnection Agreement.

C. <u>DG – Residential Net Metering 20 kW or Less</u>

1. Applicable to Distributed Generation Facilities that are Qualifying Facilities rated to produce an amount of electricity less than or equal to the amount of electricity the Customer for whom the DG is installed is reasonably expected to consume but not greater than 20 kW and connected in parallel operation to the Cooperative's electric system in accordance with the Cooperative's service rules and regulations and the Cooperative's Distributed Generation Procedures and Guidelines Manual for Members (available on request). This rate is not applicable to temporary, shared, or resale service.

SECTION: RATES AND CHARGES

Page 2 of 4

- 2. Net metering is defined as measuring the difference between the electricity supplied by the Cooperative and the electricity generated by the Customer's generating installation. The Cooperative may accomplish net metering by installing meters to measure all energy supplied by the Cooperative and all energy supplied by the Customer in excess of the Customer's on-site consumption.
- 3. For all Customers billed under the provisions of this tariff on or before October 1, 2016, the following shall apply: When the energy supplied by the Customer exceeds the energy supplied by the Cooperative during a billing period, the excess energy shall be banked for application to the next month's billing as energy supplied by the Customer for Customer's on-site consumption. The banked kWh balance shall be recalculated each month to recognize the use of banked energy and additions to banked energy. The banked kWh balance, if any, shall carry to the next month through the December billing period at which time the banked kWh balance will be reset to zero (0) kWh with no compensation for any unused banked excess energy. Banking of excess energy will begin anew with the January billing period. The provisions of this paragraph shall terminate on the earlier of (i) the sale, transfer or retirement of the Customer's generating installation, or (ii) July 31, 2026, and upon the termination of the provisions of this paragraph the provisions in the following Paragraph 4 shall apply.
- 4. For all Customers that do not meet the Customer requirements of Paragraph 3, above, the following shall apply: There will be no banking of energy. When the energy supplied by the Customer exceeds the energy supplied by the Cooperative during any billing period, the Customer shall be compensated for the excess energy at the Cooperative's avoided cost of energy, which may be provided monthly by the Cooperative's power supplier, or may be calculated periodically by the Cooperative. This shall typically not be the Cooperative's total cost of energy, but rather the cost of energy estimated by the Cooperative to have been avoided by reason of the Customer's generating installation.
- 5. The greater of the monthly charges and/or minimum bill of the retail rate schedule shall be billed by the Cooperative.

D. $\underline{DG - All Others}$

1. Determination of billing shall be accomplished by metering that can identify both all energy supplied by the Cooperative and all energy supplied by the Customer in excess of the Customer's on-site consumption.

SECTION: RATES AND CHARGES

Page 3 of 4

- For energy produced in excess of Customer's on-site consumption, the Customer shall be compensated at the Cooperative's avoided cost of energy which will be provided monthly by the Cooperative's power supplier.
- 3. The Cooperative may, at its sole discretion, purchase energy from non-qualifying Customers on a non-discriminatory basis under the terms of this section.
- 4. The Cooperative shall not be required to make any purchases that will cause the Cooperative to no longer be in compliance with any applicable contracts or all-power contract requirements with its power supplier(s) unless required by law or state regulation.
- 5. The Cooperative shall compensate the DG Customer by direct payment or bill credit on a monthly basis for the energy supplied by the DG Customer to the Cooperative.
- 6. The Cooperative will pay DG for all power purchased at the following rates:

Capacity – No payment except by separate firm power contract between the DG and the Cooperative.

Energy – The metered kWh output from the DG will be purchased at the Cooperative's total energy and fuel cost per kWh purchased as calculated from the Cooperative's most recent wholesale power bill.

E. <u>Customer Charge DG</u>

For additional metering and billing costs

For DG of 10 kW or less @ \$ 12.00 per meter per month For DG greater than 10 kW @ \$ 40.00 per meter per month

F. Data Access – Communications Links DG

In addition to all other charges in the Customer's tariff and this rider, the Customer will provide the Cooperative and/or its power supplier, at the Customer's expense, a communications link, as approved at the sole discretion of the Cooperative and/or its power supplier, for remotely obtaining meter readings at a time or times of the month as determined at the Cooperative's sole discretion.

G. Meter Reading Charge DG

SECTION: RATES AND CHARGES

Page 4 of 4

If Cooperative personnel or agents must read the DG Customer meter in an area in which the Cooperative normally reads meters remotely, the following charge shall apply:

Monthly Meter Reading Charge @ \$25.00 per meter per month

H. Agreements

An Interconnection Agreement by and between the Customer and the Cooperative shall be required.

APPROVED: 11/23/2009 EFFECTIVE: 10/01/2016 REVISED: 8/22/2016